

Split

High output task light for large demanding workspaces requiring extra illumination.



Distinctively designed office lighting.




Split LED Lighting

Split is a powerful task light for large, demanding workplaces. It has twice the light output of our traditional task lights making it particularly suitable for large work surfaces where plenty of light is needed. With its graceful shape and all-metal construction, this impressive task light will stand out in any office environment. It has a spring-balanced arm in the Luxo tradition, for maximum reach and flexibility.



2 x 6 Watt LEDs—Form & Function

Split is equipped with two custom-made 6-Watt LED modules, providing a broad, directional light across the work surface. The two LED modules are positioned at a 30° angle, thus generating a particularly wide light distribution. With two LED modules, the light covers a large area, while the lamp head stays parallel with the surface. This creates an asymmetric and ergonomically correct workstation lighting. Providing bright, warm light, the LEDs have an incredibly long life expectancy of 50,000+ hours. That means 25 years or more with normal office use.

Non-stock item/special order only
Color: silver grey or white

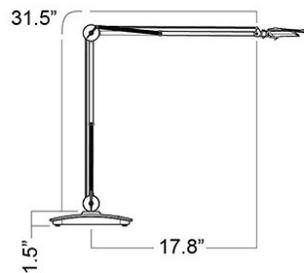

Asymmetrical Light Distribution

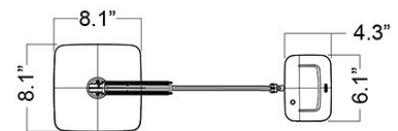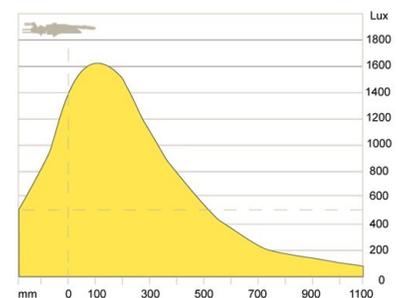

Light Source	Two 6W LED modules (13.6W total energy consumed) 600 lumens Color Rendering Index (CRI): 90 Color temperature: 3000K Dimmable / 9/4 auto shut-off Optional integrated PIR motion sensor 120v plug in power supply
Body Material	Steel arm and aluminum shade Non-stock/special order only Color: silver grey or white Custom colors available
Mounting	Edge clamp; optional table/desk base
Optics	Asymmetrical light distribution White, polycarbonate reflectors
Arm / Head Technology	31.5" parallel, three-pivot arm Side-to-side and up-and-down head movement
Part #	Description
SPL026285	Split with edge clamp, silver grey
SPL026286	Split with edge clamp, white
BRK026256	Table/desk base for Split, silver grey
BRK026258	Table/desk base for Split, white